


PRODUCT DATA SHEET


DISC CONNECTOR OUT

The Disc Connector OUT was developed specifically for use in the vacuum and infusion process. The flat disc surface allows the vacuum film to lie cleanly against it, ensuring a reliable seal.

The hose is inserted securely through the central opening; an internal stop prevents the hose from being pushed through.

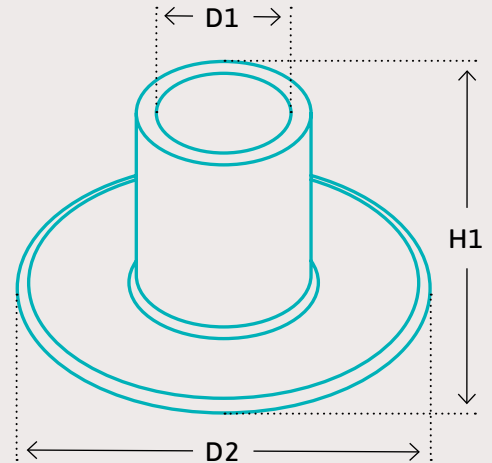

Grooves on the underside

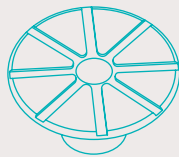

- + Grooves on the underside of the disc for improved resin or air flow
- + Material: POM – rigid, dimensionally stable, chemical-resistant
- + Media: epoxy and polyester resin
- + Temperature: -40 °C to +90 °C, briefly +110 °C*
- + Application: vacuum and infusion in a single component

* The temperature resistance depends on the specific application and medium. The customer is responsible for verifying the suitability of the product under their individual operating conditions.

Disc Connector OUT

Item No.		Ø-Hose	PU	Material	D1	D2	H1
TVO-10-100	Soon	10 mm	100	POM	10,5 mm	43 mm	26 mm
TVO-12-100	Soon	12 mm	100	POM	12,5 mm	43 mm	26 mm
TVO-16-100	Soon	16 mm	100	POM	16,5 mm	52 mm	27 mm