


PRODUCT DATA SHEET

INFUSION CONNECTOR MINI CROSS

The Infusion Connector Mini Cross enables compact cross-routing of spiral hoses in vacuum infusion. Its small footprint makes it particularly suitable for small components and compact infusion setups.

The flat underside rests beneath the vacuum film and supports a reliable seal at the connection area. The cross-shaped pass-through routes spiral hoses in different directions, while an additional opening on top allows the resin feed to be connected.

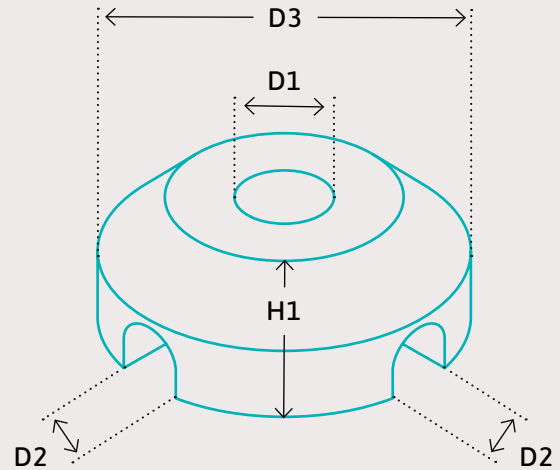

- + Connection for resin feed on top; spiral hose is routed through the cross opening
- + Material: PP – chemical-resistant
- + Media: epoxy and polyester resin
- + Temperature: -20 °C to +90 °C, briefly +100 °C*
- + Application: compact cross-routing for small components

* The temperature resistance depends on the specific application and medium. The customer is responsible for verifying the suitability of the product under their individual operating conditions.

Infusion Connector Mini Cross

Item No.	Ø-Hose	PU	Material	D1	D2	D3	H1
ICMC-08-100	8 mm	100	PP	8 mm	6,5 mm	30 mm	14 mm
ICMC-09-100	9 mm	100	PP	9 mm	6,5 mm	30 mm	14 mm